

Cope & Pattern Insert Cutters (3/4" to 7/8" material)

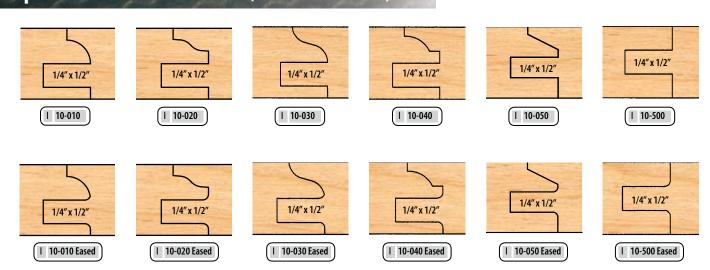


Straight Cutter Inserts

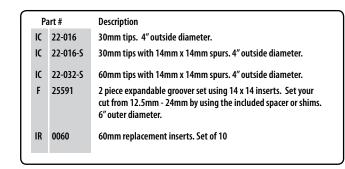

Using standard 30mm or 60mm carbide inserts, this is an easy and inexpensive way to perform trim or rabbet cuts. Please note: spurs are required for all cuts except trimming.

Raised Panel Insert Cutters

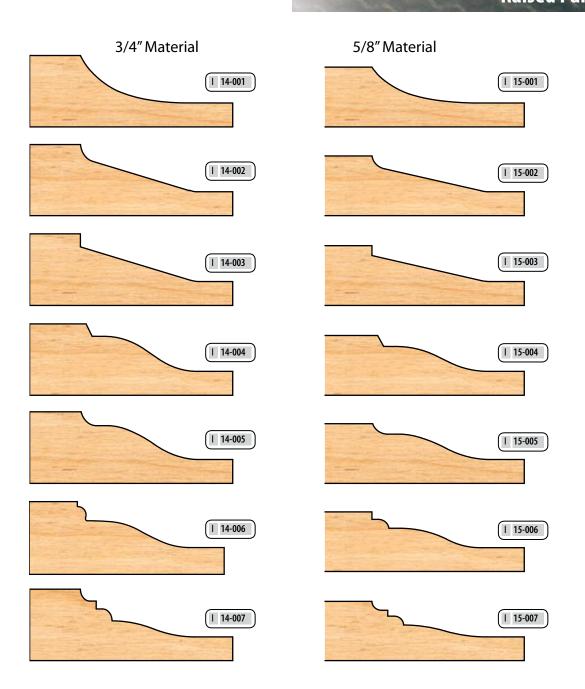

Back Cutter — Raised Panel Door Edge Detail Insert Cutters

