
## Cope & Pattern Insert Cutters (3/4" to 7/8" material)

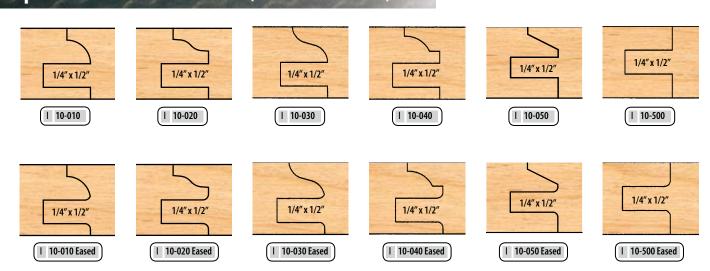


## **Straight Cutter Inserts**



Using standard 30mm or 60mm carbide inserts, this is an easy and inexpensive way to perform trim or rabbet cuts. Please note: spurs are required for all cuts except trimming.

## **Raised Panel Insert Cutters**

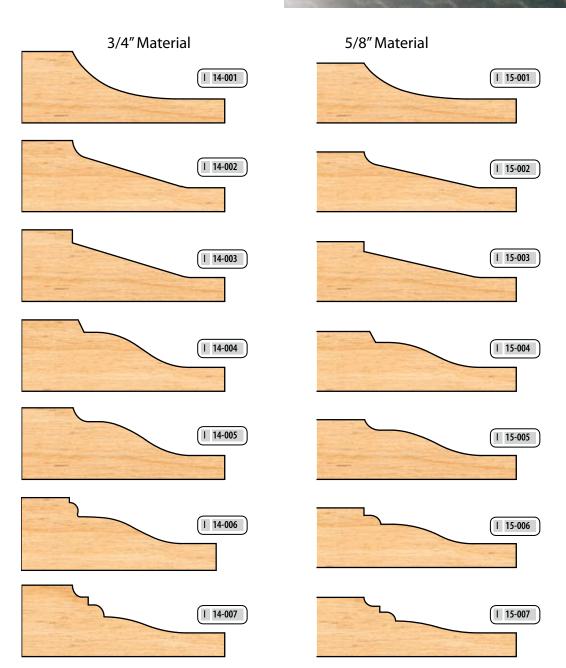

## Back Cutter – Raised Panel Runs with "15" Series raised panel cutters Page Detail Insert Cutters 17-001 17-101