
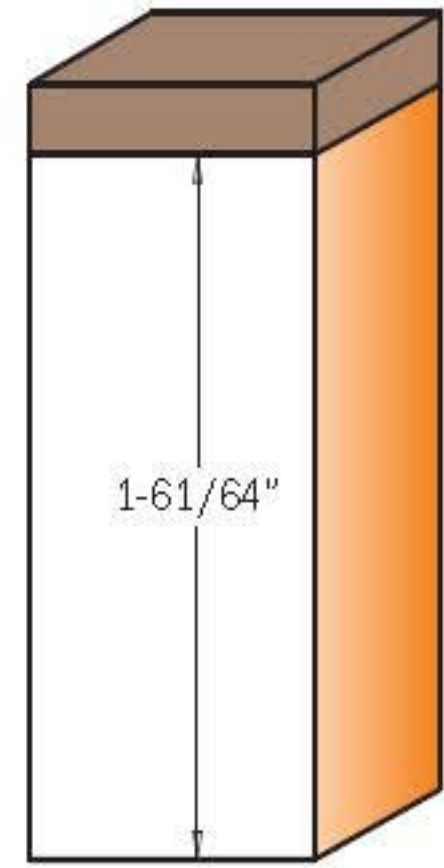


Insert Carbide Pattern Bit for Mdf/Laminate

INSERT CARBIDE Z1 RH

652B

Primarily for use in portable routers, these extra-long single-edge bits deliver clean cuts in laminated MDF and other composites, as well as hard or soft wood.

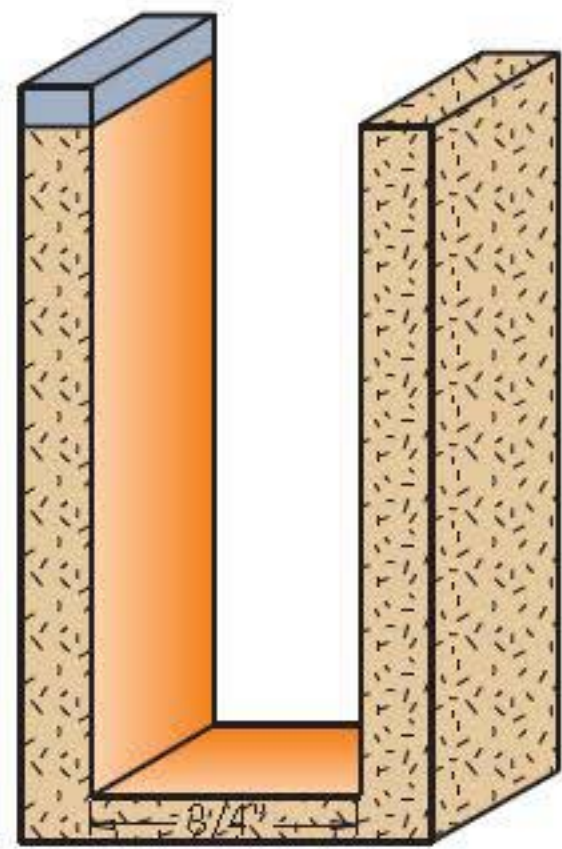

Drawing are 1:1 scale

ORDER NO. 1/2" shank	D		I inches	L inches	Spare parts			
	inches	mm			Knives	Torx Screw	Torx key	Bearing
652.691.11B	3/4	19	1-61/64	3-61/64	790.495.09	990.072.00	991.061.00	791.011.00
Spare parts	541.002.00	Ø1/2" stop collar						
	991.056.00	1.5mm Hex key						