

# Panel Pilot Bits with Guide

CARBIDE  
TIPPED

Z1

Z2



RH



## 816

How much time do you end up spending making openings in paneling, drywall, siding, doors or windows? With the CMT panel pilot bit, the job just got quicker. The point plunges smoothly and easily and the carbide edges cut clean and fast. All of this adds up to accurate cuts in less time and with less effort - great for trimming formica, veneer and other laminates.

**Safety Tips:** Always use extra caution when working near electrical outlets and boxes - always disconnect the current. Make sure the bit does not go so deep as to cut the wires.

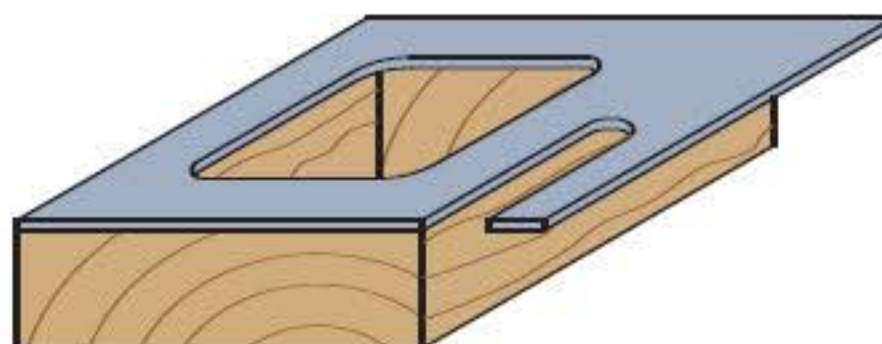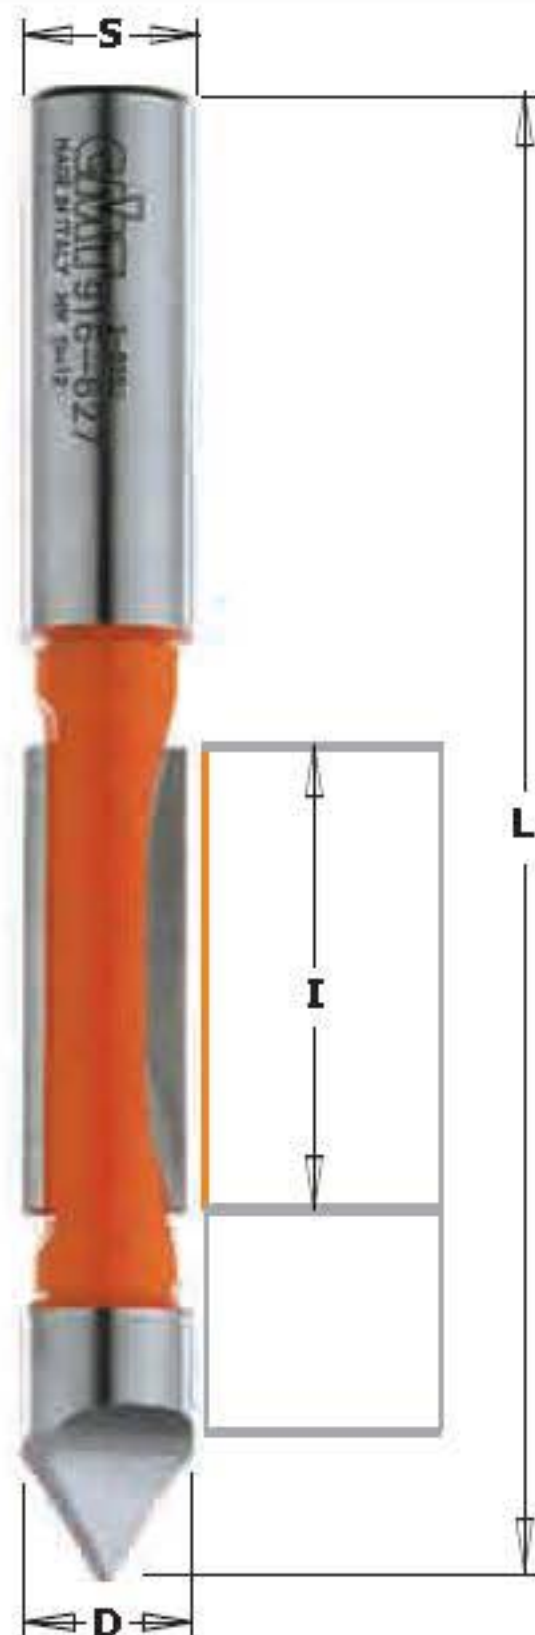

10 pcs. in Masterpack

ORDER NO. 1/4" shank	ORDER NO. 1/2" shank	D		I	L	T
		inches	mm	inches	inches	
816.064.11		1/4	6.35	3/4	2-1/2	1
816.095.11		3/8	9.53	1	3-1/16	2
	816.627.11	1/2	12.7	1-1/4	4	2
	816.627.11-X10	10 pcs. in Masterpack				